


# Plinth | 2000

## FITTING A FOOT SWITCH TO THE LINAK CBO9 MOTOR SYSTEM

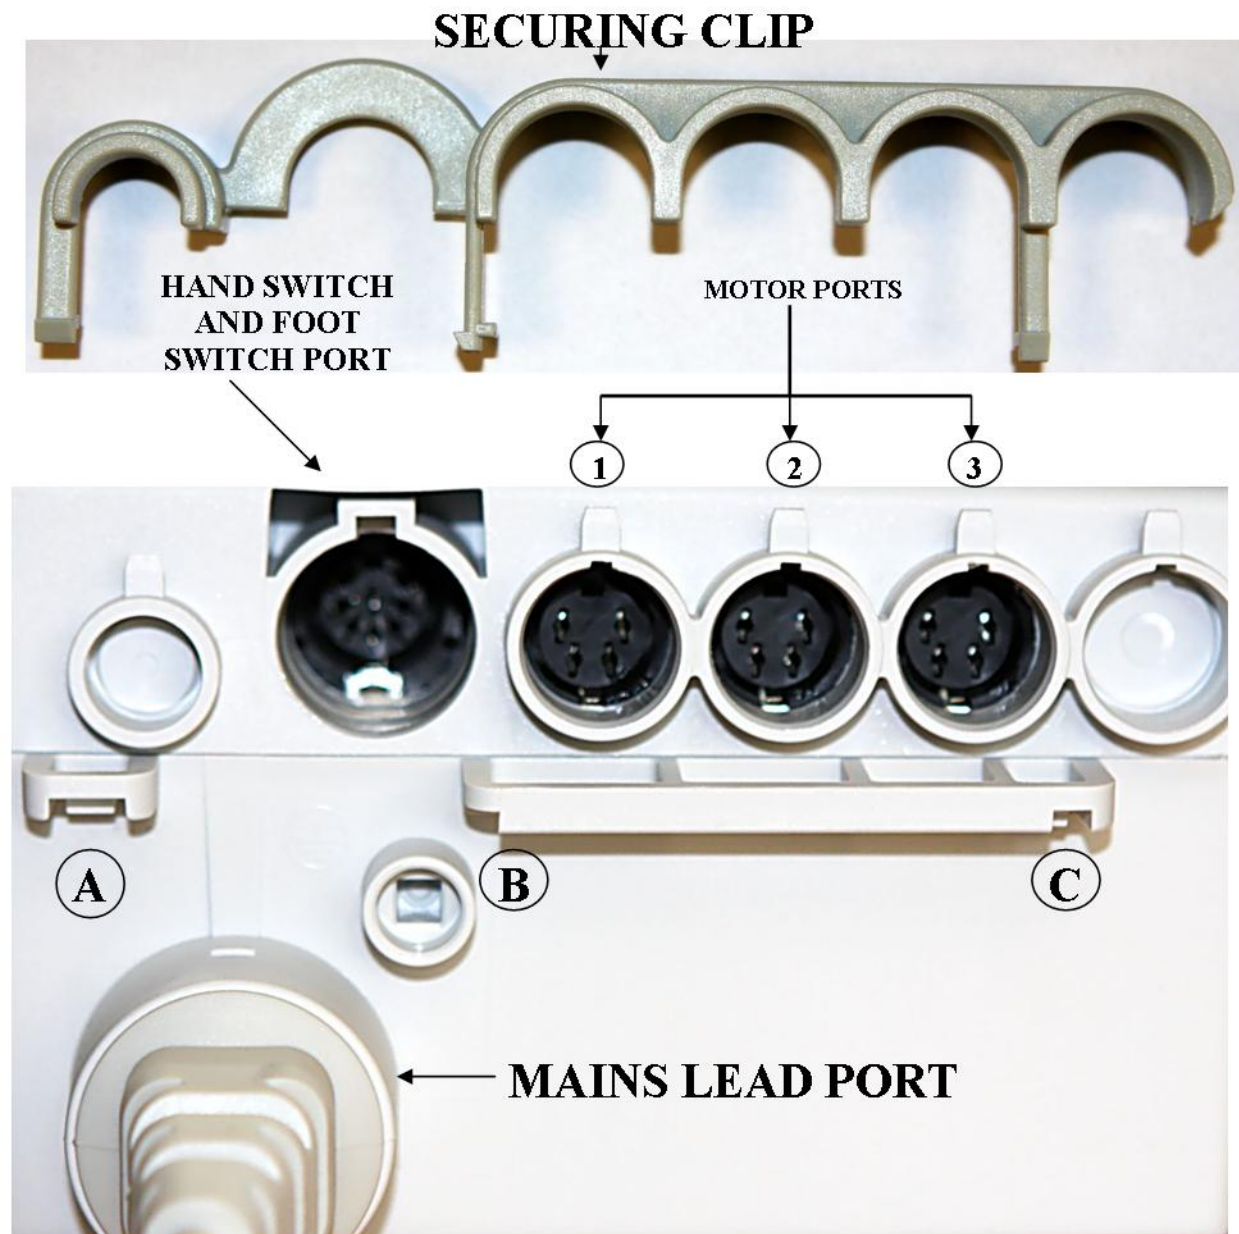

**1, REMOVE SECURING CLIP @ POINTS A, B AND C**

**2, MAKE SURE THAT THE LIFT MOTOR IS IN MOTOR PORT 1 AND THE TILT MOTOR IS IN MOTOR PORT 3.**

**3, REPLACE SECURING CLIP, MAKING SURE ALL CLIPS ARE LOCATED FULLY.**