Plinth | 2000

Paediatric Tilt Table

Model: 501P

SERVICE MANUAL

Contents

1.	**Introduction**	**3**
	General Warnings	3
2.	**Cleaning and Decontamination**	**4**
3.	**Maintenance**	**5**
	General Maintenance	5
	Service Checklist	6
4.	**Troubleshooting**	7
5.	**Parts Lists and Diagrams**	**8**
	Exploded Diagram	9
	Base Drawing	10
	Middle Drawing	11
	Top Drawing	12
	Lift Lever Drawing	13
	Link Lever Drawing	14
	Accessories Drawing	15
6.	**Guarantee**	**16**
7.	**Technical Specification**	**17**
8.	**Revisions to Manual**	**18**

Plinth 2000 Ltd is an ISO Audited company to ISO9001:2008

Our products are CE marked in conformity with the EC Directive MDD 93/42/EEC

1. Introduction

Thank you for purchasing a product from Plinth 2000 Ltd. We use the highest quality components and manufacturing techniques to ensure that our products are simple to use and will last a long time. It is recommended that all users read and retain this User Manual for reference.

Throughout this manual notice is made of a Warning and Caution system to highlight to the user practices, procedures or conditions that should either not be allowed to happen or happen with caution.

Warnings are in a box with bold type and identify potential hazards, procedures or conditions which could result in death, injury or serious damage.

Cautions are in a box with plain type and identify conditions or procedures where if caution is not taken it may result in damage or failure of equipment.

General Warnings

WARNING

Maximum Load (SWL) is 250kg distributed evenly.

Do not use flammable gasses in proximity to an electrically operated table.

Do not concentrate weight on either side or either end of the table.

Use only accessories approved for use with this table.

Disconnect power supply before moving table.

Children must be adequately supervised in the presence of the table.

Do not allow children to play with the table at any time.

2. Cleaning and Decontamination

WARNING

If contamination is suspected then decontaminate the table before use.

Torn or damaged upholstery should be replaced immediately.

CAUTION

Do not use Alkalis or other organic solvents for routine cleaning.

Always cover the vinyl with paper towelling or couch covers if it can come into contact with bare skin.

Cleaning

Always wear suitable protective clothing before carrying out this procedure. Disconnect the mains supply to the table and move it to a suitable cleaning area and lock the castors.

Step 1. Using warm water and soap on a damp cloth, carefully wipe the table over from top to bottom. Take great care around electrical components.

Step 2. Wipe the table carefully from top to bottom using a clean damp cloth and soap free water.

Step 3. Carefully dry the table from top to bottom with clean lint free paper towels.

Decontamination

To decontaminate the table repeat the above steps but using a dilute solution of Hypochlorite and warm water (10,000ppm) instead of warm water and soap. At the end of the procedure discard all cleaning materials in a safe manner and wash hands thoroughly.

3. Maintenance

Plinth 2000 Ltd products are designed to be maintenance free. However keeping your Plinth products clean and regularly checked will assist in prolonging their working life. The following is a guide of simple checks that the user can carry out on a six monthly basis. We would also recommend an annual service visit by a Plinth 2000 trained engineer.

WARNING

Disconnect table from electrical supply before commencing any of the following checks.

Examine the table for any signs of damage. Pay particular attention to all nuts, bolts and fasteners to check they are present and tight but not over tight.

Upholstery bolts should all be checked (each section has between 2 and 6 No. M6 bolts), they should all be present and tight.

Check gas struts (if fitted) and ensure that they operate through the full range of movement and lock fully.

Check hinge pins are lubricated and not rusty.

Check main table nylon pivot bearings are lubricated sufficiently.

Examine mains and switch cables for any damage, cuts, kinks, abrasions etc. These must be replaced if necessary.

Check mains lead, switch cables and slave motor leads are all correctly and securely attached.

Check correct plug fuse is fitted (5A).

WARNING

Any electrical checks or work other than the visual inspection above must be performed by a qualified electrician.

Do not connect BLUE or BROWN wires to the earth terminal of a plug.

Plinth | 2000

Service Check Sheet

Plinth 2000 Ltd.
Wetheringsett Manor
Wetheringsett
Stowmarket
Suffolk IP14 5PP
United Kingdom

t: +44 (0)1449 767887
f: +44 (0)1449 766122
e: sales@plinth2000.com

www.plinth2000.com

- ☐ CORRECT COUCH TO BE SERVICED
- ☐ IDENTIFY SERIAL NUMBER
- ☐ IDENTIFY PUMP/MOTOR TYPE
- ☐ ANY SPECIFIC FAULTS ADVISED BY CUSTOMER
- ☐ CAPS & FERRULES ETC
- ☐ ADJUSTABLE FOOT & FOOTCAPS
- ☐ UPHOLSTERY CONDITION
- ☐ NUTS, BOLTS & FASTENINGS TIGHT & GOOD CONDITION
- ☐ GAS STRUTS (if applicable)
- ☐ BACKREST & FOOTREST SPRINGS (if applicable)
- ☐ BACKREST & FOOTREST OPERATION (sections hold with no slip)
- ☐ PEDAL RUBBERS
- ☐ STARLOCKS TIGHT & GOOD CONDITION
- ☐ NYLON BUSHES (Y/N)
- ☐ IF NO CHECK FRAME FREE AND NOT AT RISK OF SEIZING
- ☐ OIL WHEEL PEDAL SYSTEM
- ☐ OIL HINGES
- ☐ OIL FRAME BEARING POINTS
- ☐ OIL PUMP/MOTOR FITTING POINTS
- ☐ FRAME CHECK (welds & overall condition)
- ☐ MAINS CABLE & PLUG CONDITION (if applicable)
- ☐ HAND/FOOT SWITCH CONDITION (if applicable)
- ☐ FUNCTION TEST OF PUMP/MOTOR
- ☐ AGE AND LIFE OF MOTOR IF KNOWN (use manufacturers guideline chart)
- ☐ WEIGHT TEST
- ☐ SERVICE STICKER FITTED

4. Troubleshooting

5. In the unlikely event of the couch failing to operate and having carried out the normal practical fault finding steps below then please contact our Customer Service Team on +44 (0)1449 767887 or email customerservice@plinth2000.com. **Please have the serial number to hand before making contact so we can help you more efficiently.**

Fault	Possible Cause	Remedy
Couch is unstable	Uneven floor	Move couch to flat floor
	Damaged Castor	Replace Castor
Both motors will not work	Power disconnected	Connect power supply
	Fuse Blown	Replace fuse in plug
	Hand/ Footswitch disconnected	Check the switch is fully connected to the motor
One motor will not work but the other is working	Lead from height motor/control box not connected to slave motor	Check and connect all leads
	Fault with switch	Replace switch
	Fault with control box	Replace control box
	Fault with motor	Replace motor
Motor sinks	Switch permanently operated	Unplug and re-connect switch
	Motor fault	Replace motor
Patient Grab Handles don't lock	Thread in locking lever stripped	Replace locking lever(s)
	Thread in Grab Handles stripped	Replace Grab Handles

6. Parts lists and diagrams

501 P - Pediatric Tilt

PARTS LIST		
ITEM	QTY	PART NUMBER
1	1	Part No. 05102 - Tilt Base
2	2	Part No. 05001 - Std. 60-60 Link Bar
3	1	Part No. 05103 - Tilt Middle
4	1	Part No. 05003 - Std. Lift Lever
5	8	20mm Dome Cap Star Lock - Part No. #0116
6	1	Part No. 05177 - 501 Pediatric Top
7	1	Matrix 60
8	1	Matrix 30
8	1	20mm Bright Round - 400mm - Part No. 01161
10	6	Form B 20mm Washer - Part No. #0146
8	2	1150mm Grab Rail - Part No. #0199
9	1	20x20x1.5 Stainless @ 700mm - Part No. 00576

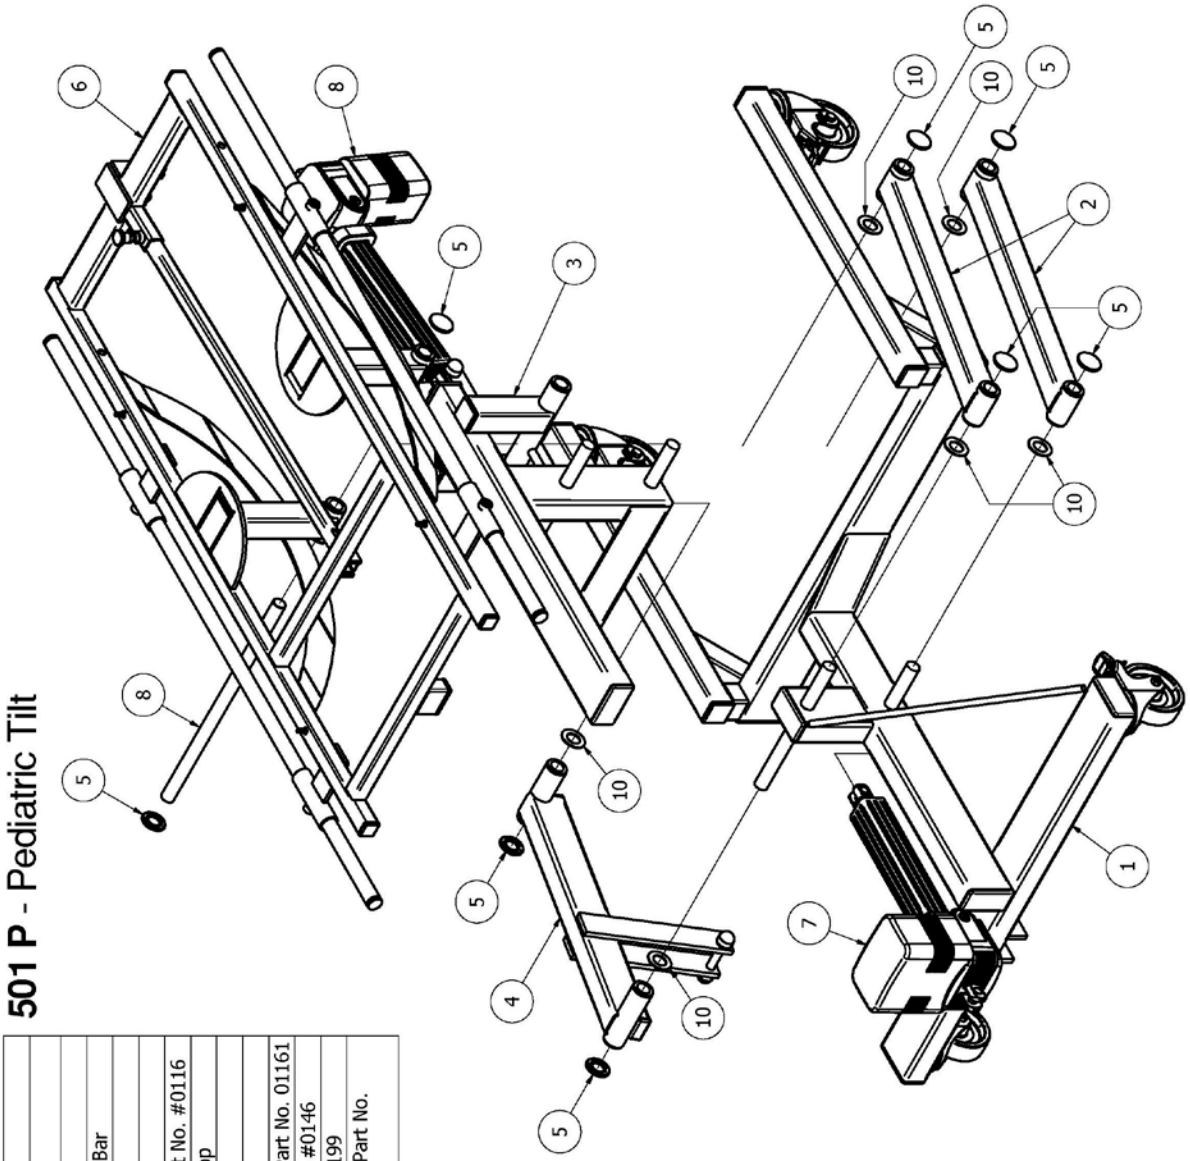

501 Tilt Base - Part No. 05102

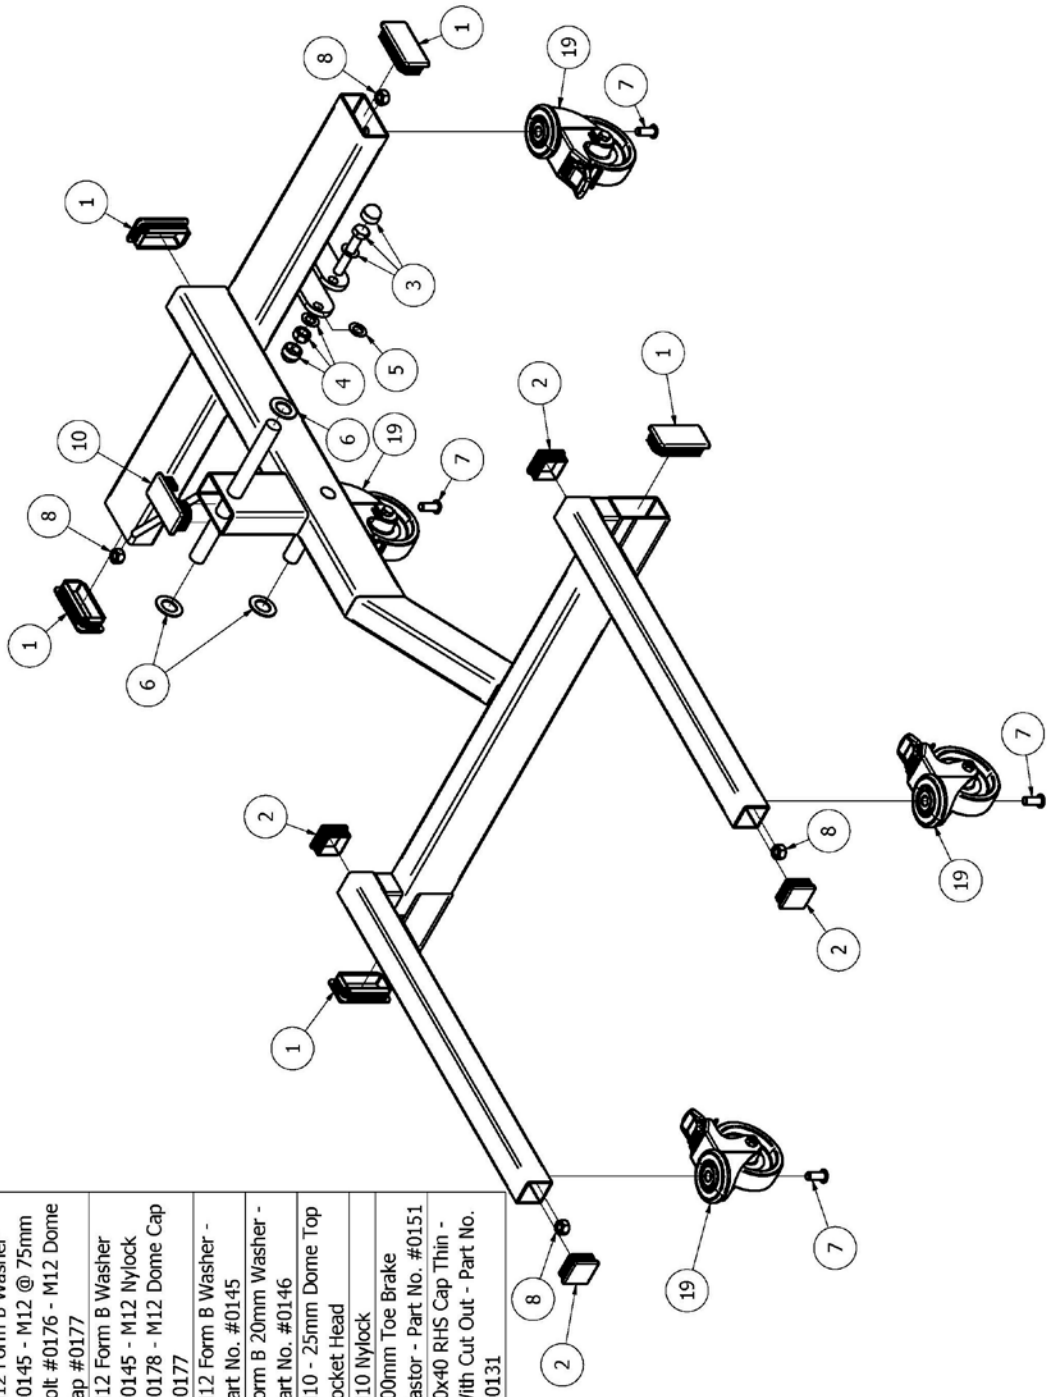

PARTS LIST		
ITEM	QTY	PART NUMBER
1	5	80x40 Cap Thin
2	4	40x40 Cap - Part No. #0123
3	1	M12 Form B Washer #0145 - M12 @ 75mm Bolt #0176 - M12 Dome Cap #0177
4	1	M12 Form B Washer #0145 - M12 Nylock #0178 - M12 Dome Cap #0177
5	1	M12 Form B Washer - Part No. #0145
6	3	Form B 20mm Washer - Part No. #0146
7	4	M10 - 25mm Dome Top Socket Head
8	4	M10 Nylock
9	4	100mm Toe Brake Castor - Part No. #0151
10	1	80x40 RHS Cap Thin - With Cut Out - Part No. #0131

PARTS LIST		
ITEM	QTY	PART NUMBER
11	1	80x40 Cap Thin
12	2	40x40 Cap - Part No. #0123
13	2	20mm Nylon Bush - Part No. #0182
14	1	M12 Form B Washer #0145 - M12 @ 75mm Bolt #0176 - M12 Dome Cap #0177
15	1	M12 Form B Washer #0145 - M12 Nylock #0178 - M12 Dome Cap #0177
16	3	Form B 20mm Washer - Part No. #0146

501 Tilt Middle - Part No. 05103

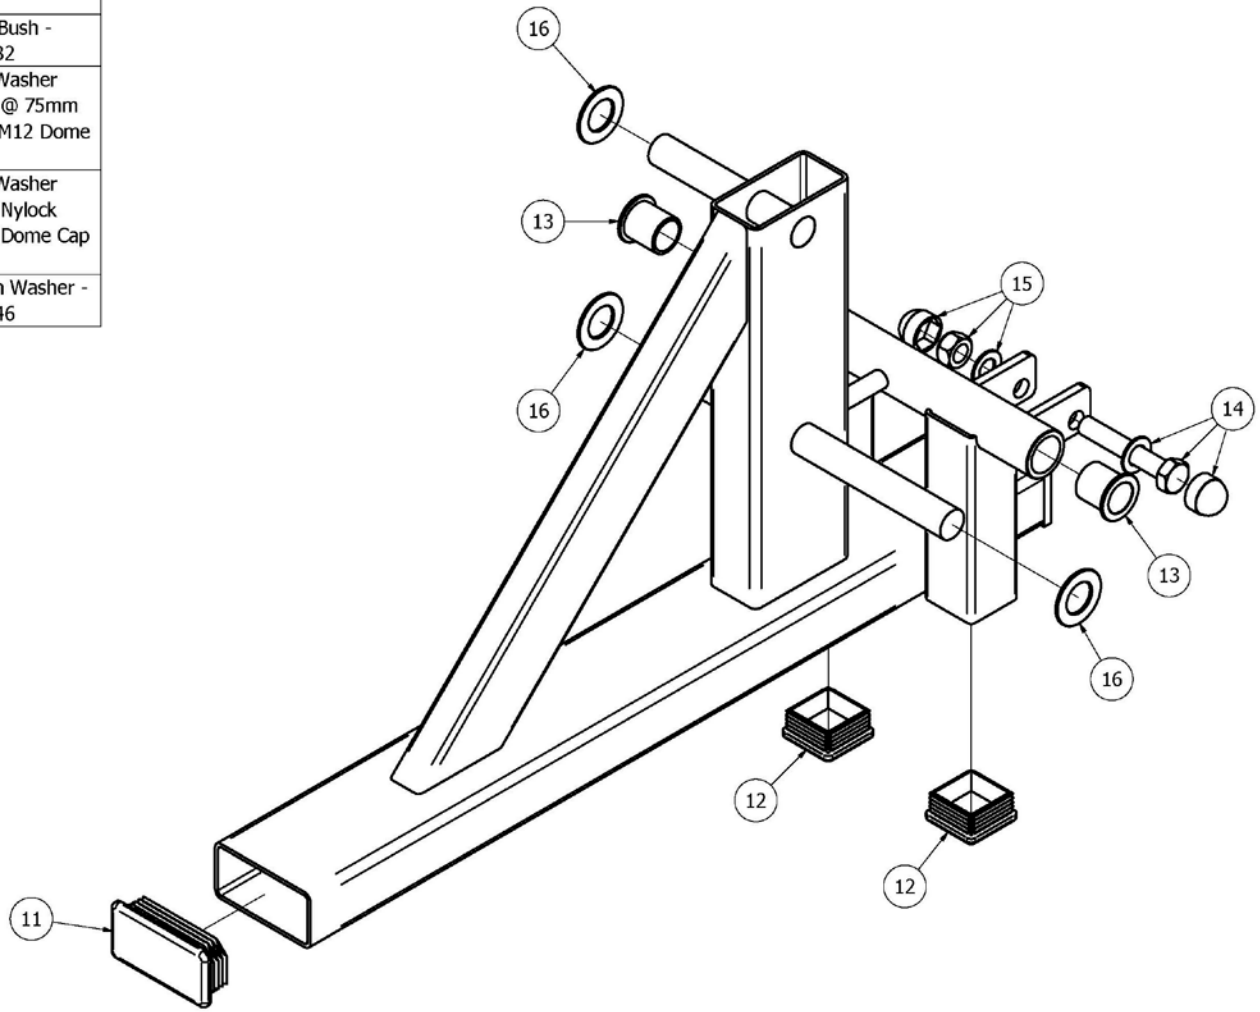

501 Pediatric Tilt Top - Part No. 05177

PARTS LIST		
ITEM	QTY	PART NUMBER
1	4	20mm Nylon Bush - Part No. #0182
2	4	25.4x25.4 Cap - Part No. #0112
3	1	50.8x25.4 Cap Thick - Part No. #0124
4	1	M8 @ 40mm - Part No. #0159
5	2	M8 Cap - Part No. #0160
6	1	M8 Nylock - Part No. #0161
7	4	M6 @ 40mm #0154 & Repair Washer #0184
8	1	12mm Index Plunger - Part No. #0106
9	1	M12 Form B Washer #0145 - M12 @ 75mm Bolt #0176 - M12 Dome Cap #0177
10	1	M12 Form B Washer #0145 - M12 Nylock #0178 - M12 Dome Cap #0177
11	4	Hex Grub - Part No. #0147
12	1	20x20x1.5 Stainless @ 700mm - Part No. 00576
13	2	1150mm Grab Rail - Part No. #0199
14	4	22.22x3 Tube Bung - Part No. #0117

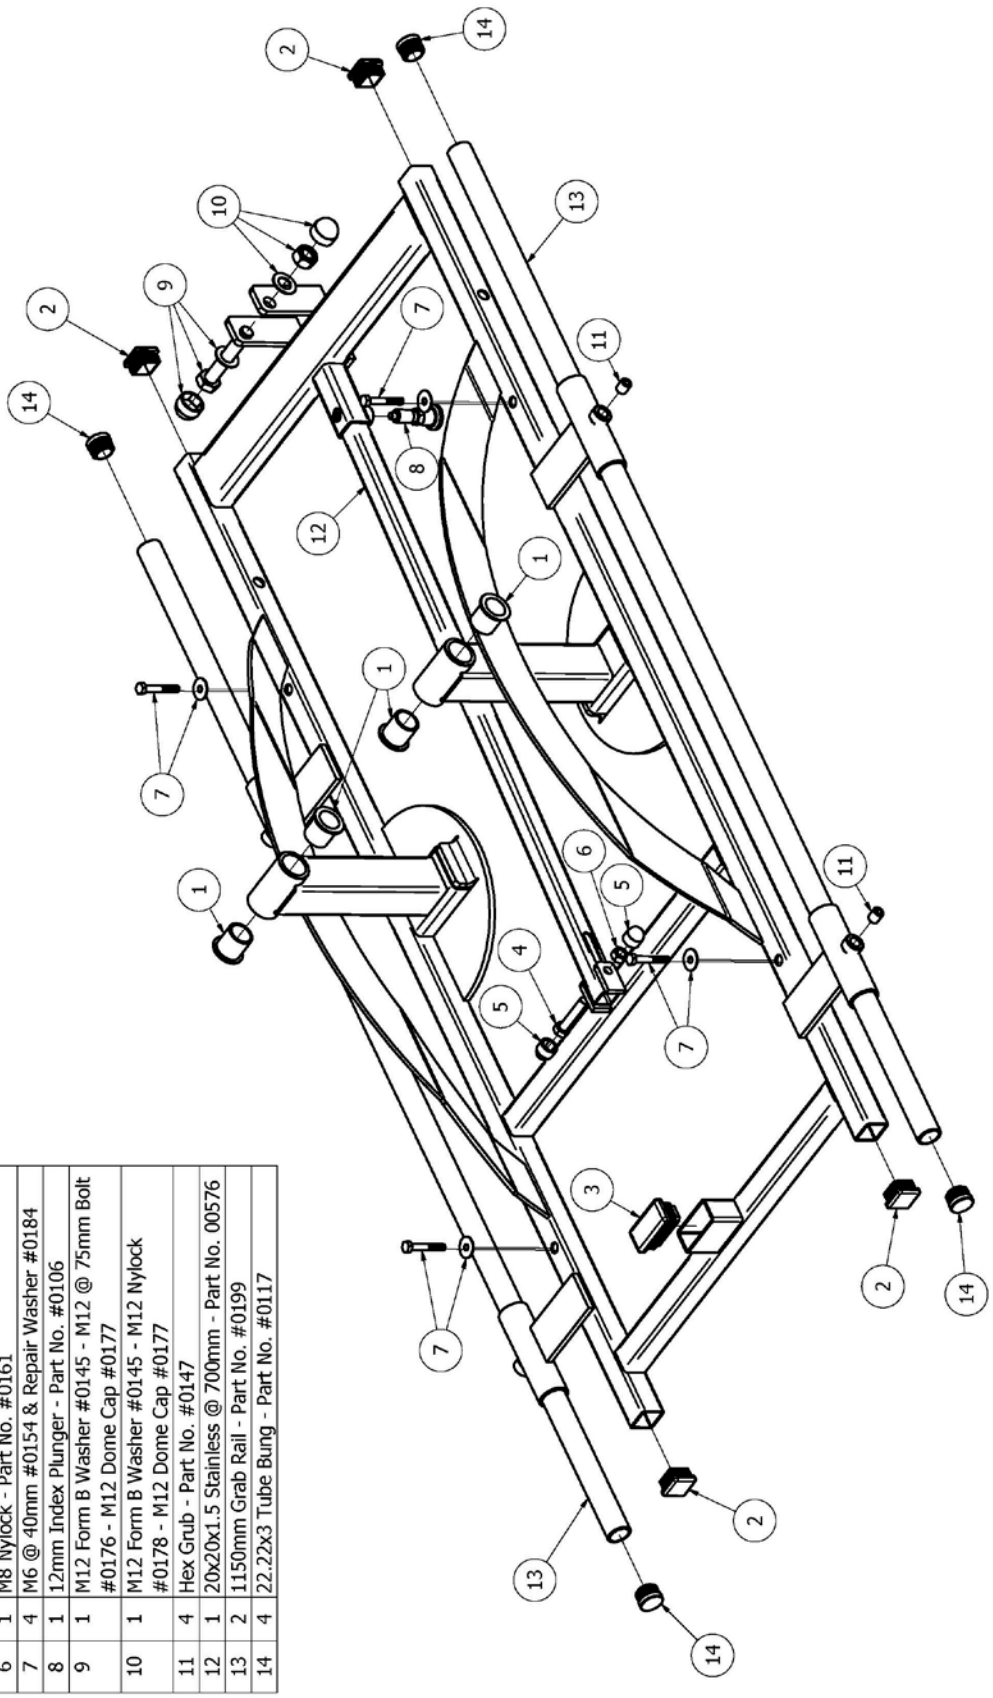

Lift Lever - Part No. 05003

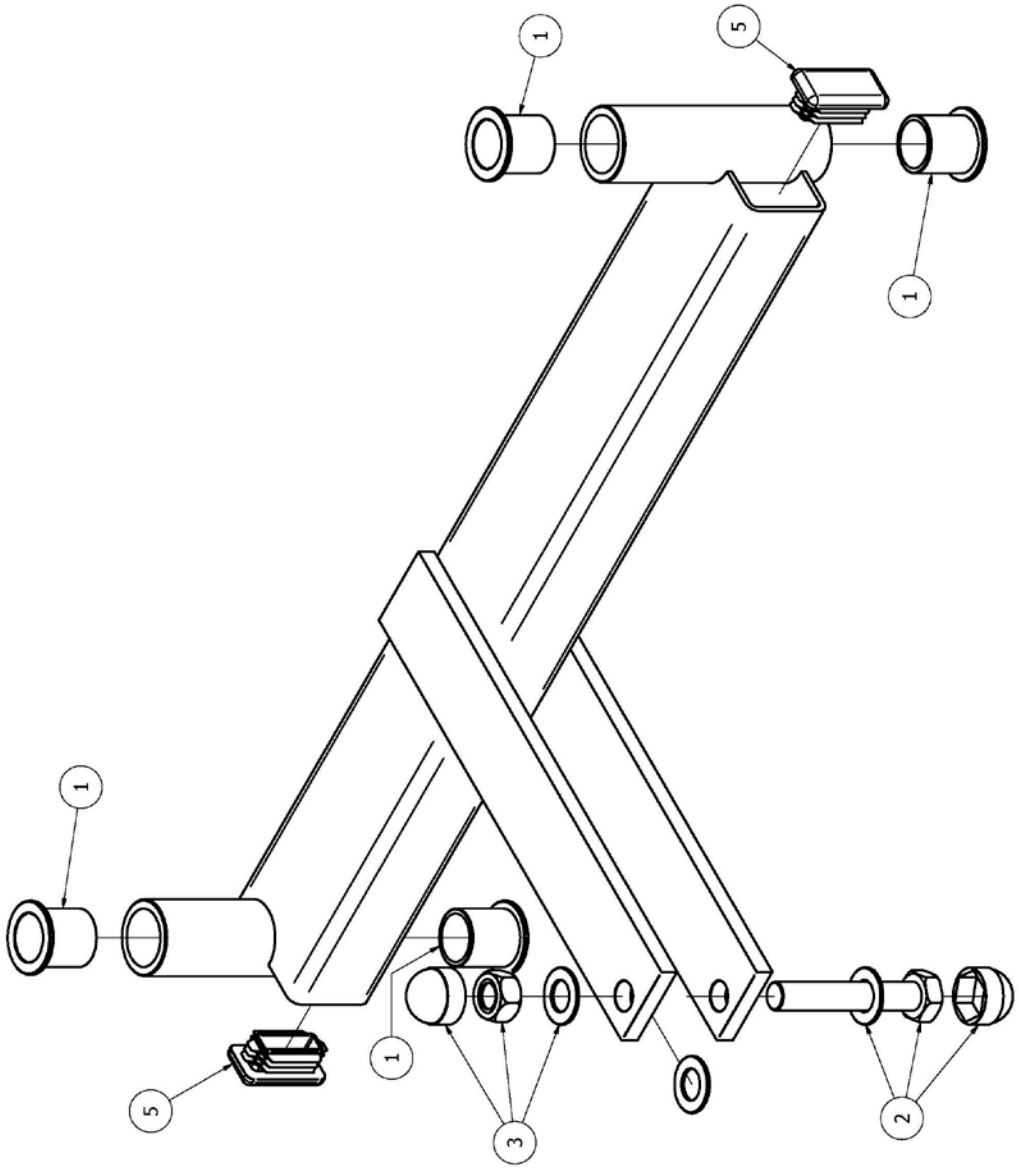

PARTS LIST		
ITEM	QTY	PART NUMBER
1	4	20mm Nylon Bush - Part No. #0182
2	1	M12 Form B Washer #0145 - M12 @ 75mm Bolt #0176 - M12 Dome Cap #0177
3	1	M12 Form B Washer #0145 - M12 Nylock #0178 - M12 Dome Cap #0177
4	1	M12 Form B Washer - Part No. #0145
5	2	40x20 Cap - Part No. #0122

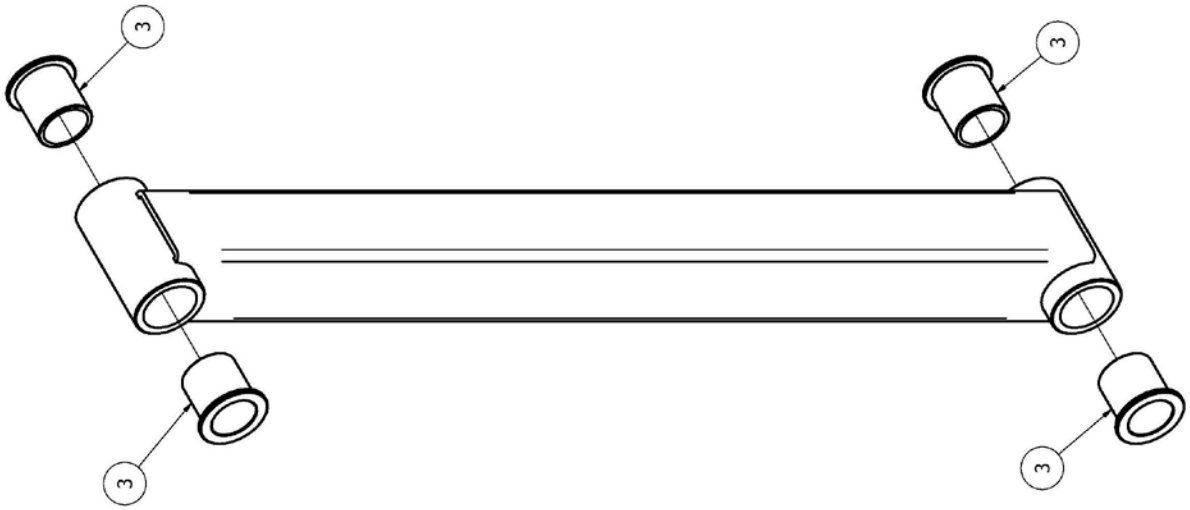

60/60 Link Bar - Part No. 05001

PARTS LIST		
ITEM	QTY	PART NUMBER
3	4	20mm Nylon Bush - Part No. #0182

501 P - Accessories

PARTS LIST		
ITEM	QTY	PART NUMBER
1	1	Part No. 05181 - Jr Foot Board
2	2	Part No. 05178 - 501 Hip Support
3	1	Part No. 05180 - Pommel
4	1	Part No. 05179A - Hip Support Brkt
5	1	Part No. 05179B - Hip Support Brkt
6	1	Part No. 05108 - Tilt Handle R
7	1	Part No. 05109 - Tilt Handle L
8	2	1150mm Grab Rail - Part No. #0199
9	1	20x20x1.5 Stainless @ 700mm - Part No. 00576

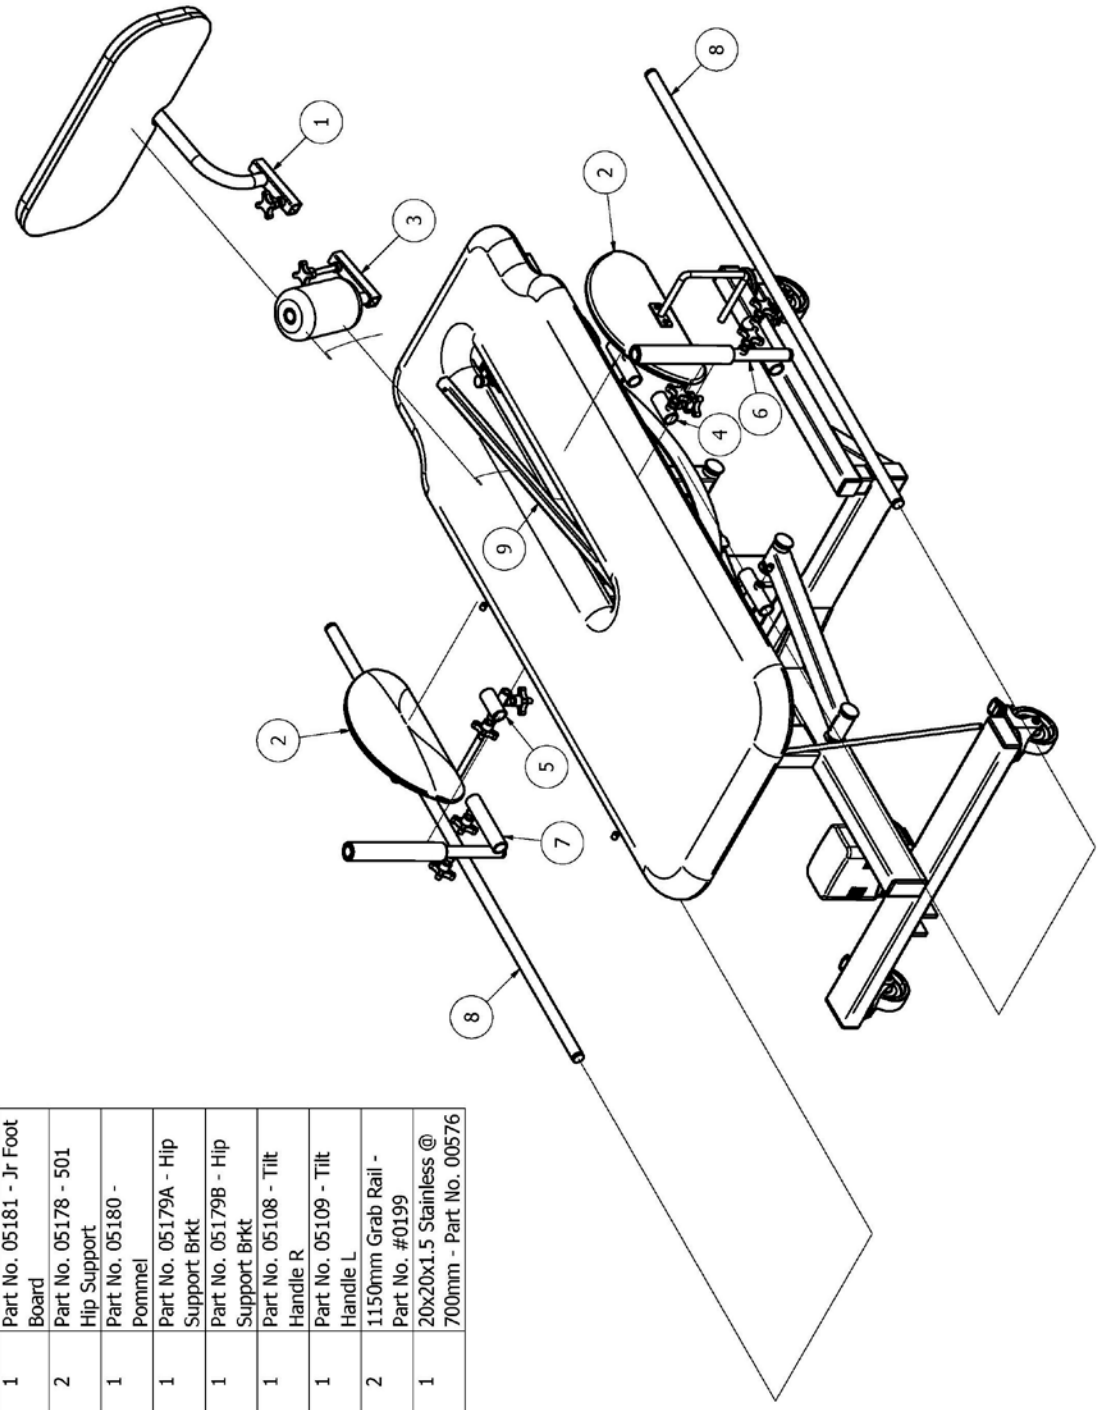

7. Guarantee and Service (UK only)

Plinth 2000 Ltd offer a 5 year parts guarantee on all Premium Range products delivered from January 2013 and a lifetime frame guarantee. The only exclusion to this guarantee is for negligent damage or damage to upholstery coverings. This guarantee does not require registration of the product as we can trace it from its serial number, however in the event of the serial number being removed, missing or unreadable then this may void the guarantee. These terms do not affect your statutory rights.

In addition to the above Plinth 2000 Ltd can offer both extended warranties and service contracts. For further information about either of these please contact:

Customer Service
Plinth 2000 Ltd
Wetheringsett Manor
Wetheringsett
Stowmarket
Suffolk
IP14 5PP
Tel: 01449 767887
Mail: customerservice@plinth2000.com

In the event of returning a product or part to us then please follow the instructions for cleaning under section 5 before enclosing it in suitable packaging and returning it to the above address. In addition please ensure there is a statement confirming that it has been decontaminated and what the fault is along with relevant contact details.

Worldwide

Please contact the distributor you purchased the table from for service and support in your country. If you are unable to do so then please contact us in the UK and we will refer you to our local representative.

8. Technical Specifications

	501P			
Top Length (cm)	**138**			
Top Width (cm)	**58**			
Backrest length (cm)	**N/A**			
Overall Width (cm)	**76**			
Overall Length (cm)	**138**			
Height Range (cm)	**51-97**			
Max Working Load	**160kg**			
Control	**Hand switch**			
Electrical Data 220/240v				
Motor(s)	**Linak LA31 x 2**			
Control Box	**Linak CB09**			
Current	**1.5A**			
Power	**360W**			
Mains Plug Fuse	**5.0A x 1**			
Internal Fuse	**1.5A x 1**			
System Voltage	**24v**			
IP Rating	**IPX4**			
Electrical Data 110/120v				
Motor(s)	**Linak LA31 x 2**			
Control Box	**Linak CB09**			
Current	**2.7A**			
Power	**360W**			
Mains Plug Fuse	**5.0A x 1**			
Internal Fuse	**3.0A x 1**			
System Voltage	**24v**			
IP Rating	**IPX4**			

IEC 601-1 Electrical Safety Classification

All models are double insulated Type B equipment and marked as such.

Double Insulated

Type B Equipment

9. Revisions to Manual

Pages	Issue No	Name	Date
All	Manual - 01	Niall Dyer	15.10.12
All	Manual - 02	Niall Dyer	07.10.13

Plinth 2000 Ltd
Wetheringsett Manor
Wetheringsett
Stowmarket
Suffolk
IP14 5PP
ENGLAND

Plinth 2000 Ltd is an ISO Audited company to ISO9001:2008

Our products are CE marked in conformity with the EC Directive MDD 93/42/EEC